



1. Remove the white plastic plug from top left corner of sash.



2. Screw the left-hand mounting bracket into place in the top corner of the sash, making sure the front edge is level with the edge of the sash timber and the side is flush with sash side.



3. Repeat for the right-hand bracket

Ensure that the screws do not protrude above the bracket surface, or they may make it difficult to push your blind into place





4. Open the window using the vent flap handle and feed the wires from the top of the blind cassette through the 8mm hole in the sash. Pull as much of the wire through the hole as possible, and before closing the window again, please ensure the wires are tucked away securely in the recess provided.



5. Take the blind cassette and with the black foam seal facing up, offer it up to the blind mounting brackets.

Once lined up, the blind mounting brackets should slide into the slots located on the top of the blind cassette. When pushed into position fully the plastic ends of the cassette should be flush against the wood.

If the plastic ends are not flush against the wood, then the blind cassette is incorrectly installed.





6. Using a pair of side cutters or similar, cut the tie holding the two loops of belt together, then cut the tie to release the loops of belt.

There is one more tie near the top of the belts, this will be removed later.



7. There are two small pieces of aluminium on the blind at each side. These are to keep the blind secure when in transit.

Remove them now by pulling them downwards so as to allow the blind cassette to be screwed into place.



8. Pull down the blind fabric from the cassette slightly to expose the fixing screw ports. Using two of the screws provided, secure the blind cassette to the sash as shown, one screw on each side.

**BE CAREFUL NOT OVER-TIGHTEN, AS THIS WILL PROHIBIT SIDERAIL INSTALLATION LATER.**




**MAKE SURE THE BELT IS NOT TWISTED BEFORE SLIDING THE BELT TENSIONER INTO THE SIDERAIL.**

9. Take 'L' belt tensioner (pictured) and slide into corresponding siderail.



10. Ensure the blind handle is central on the fabric then guide the handle and fabric into siderail as shown. Push siderail up into position on the bottom of the cassette whilst sliding the belt tensioner towards the bottom of the siderail.



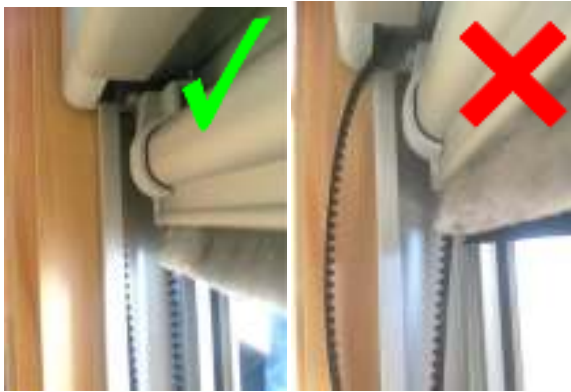

11. Ensure you do not get the belt caught between the siderail and cassette when installing the siderail. The cable tie near the top of the belts should help prevent this.

**ONCE THE BELTS ARE IN PLACE THE CABLE TIE  
MUST BE REMOVED**



12. When siderail is in position, fix it in place with one of the screws provided. Make sure siderail is pushed up tight against the front edge of the sash and tight against the side of the sash.



13. Slide the belt tensioner down over the teeth on the foot of the siderail; you should hear it click as you push it down.

Push down with your finger until belts are fully taut. Do not try to force the belts to over-tighten.

Repeat steps 8-11 for the other side.

Once both siderails are installed, it is advisable to pull down gently on the blind handle while tightening the belts to ensure any slack is definitely removed from the belts.





12. Open the window using the vent flap handle to reveal the top edge of the sash.

Remove the lid from the Blind Contact by undoing the screw.




13. Unscrew the two 15mm screws from the Blind Contact.



14. Remove the Blind Contact from the sash.

15. Feed the blind wires through the hole in the underside of the Blind Contact. Feed the exposed wire ends through the holes in the contact points and tighten the screws to hold the wires in place.

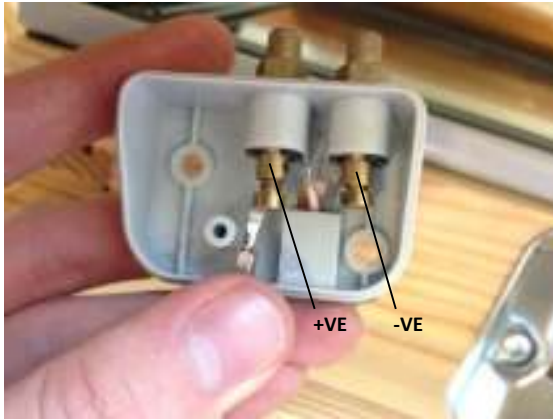

**NB. +VE WIRE TO LEFT  
-VE WIRE TO RIGHT**

**(WIRE WILL BE LABELLED  
AS SHOWN)**



16. Replace Blind Contact back onto the sash and secure using the two 15mm screws.



17. Replace the lid back onto the Blind Contact and secure into place with screw.

Ensure any visible wires are tucked away safely and close the window.





18. The blind is now fully installed.



19. To open and close the blind, use the supplied remote control.

**NB. THE BLIND WILL ONLY OPERATE WHEN THE WINDOW IS FULLY CLOSED.**

**PLEASE ENSURE THAT THE BLIND IS FULLY RETRACTED BEFORE OPENING YOUR WINDOW AS WIND AND CHANGE IN AIR PRESSURE CAN CAUSE THE FABRIC TO MALFUNCTION IF THE BLIND IS LEFT DOWN.**





20. If once operated the fabric doesn't reach the bottom then you can adjust it using the orange setting tool provided:

- Open the cassette by pressing the buttons on each end
- The limiter is the grey component circled here in red.
- The screw at the bottom (pictured with setting tool in place) changes the bottom limit on the blind. Take note of the extra distance required to close the blind so that the rubber seal closes along the full width of the sash.
- Screw clockwise (1 full turn = approx 20mm more fabric from the blind cassette) to move the fabric closer to the bottom of the window. Be careful not to go too far, as this could potentially damage the motor system.
- Close the cassette.

**ENSURE THE BUTTONS ON EACH END ARE FULLY CLICKED BACK INTO POSITION.**

**DO NOT TRY TO OPERATE BLIND WHEN CASSETTE IS OPEN; CLOSE CASSETTE OVER TO CHECK LIMIT IS CORRECT.**