


### Contents of the Keylite Vapour Collar:

- 1No. Transparent Vapour Collar
- 1No. Mastic
- 1No. Tape




Ensure, existing vapour barrier is in place, dry and free from dust or dirt.

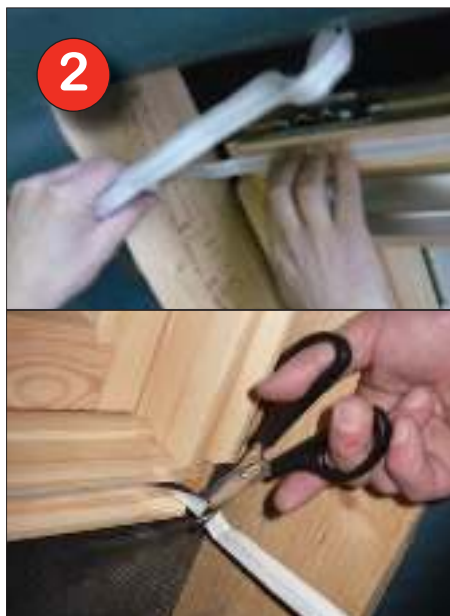

Apply mastic strips in the centre of the plaster-board groove. Trim lengths to suit.



Carefully remove protective paper.

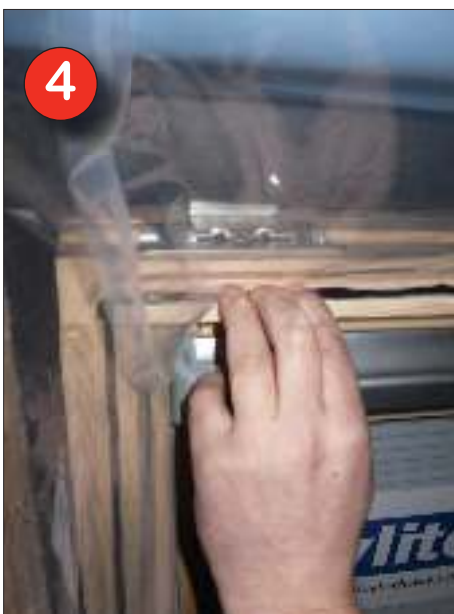

Apply inside edge of vapour collar to mastic pressing firmly. Start at top of the window and work down.



For added seal protection staple around inside edge. Ensure to staple through mastic!



Seal the outside edges of the vapour collar to the existing vapour barrier with tape provided.